

# Changing app screen font size and volume


## Step 1



### To change the font size:


- Press 'MENU' on the bump bar connected to the app screen that requires the font size to be changed.

## Step 2

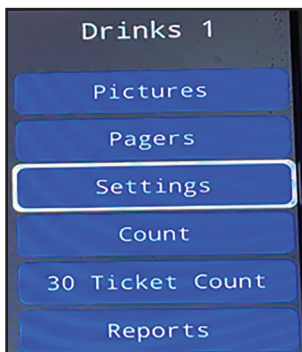

- A list of options will be displayed on the app screen.
- Use the scroll bar on the bump bar to move the white box until 'Settings' is highlighted.
- Press the 'SHOW' button on the bump bar.

## Step 3

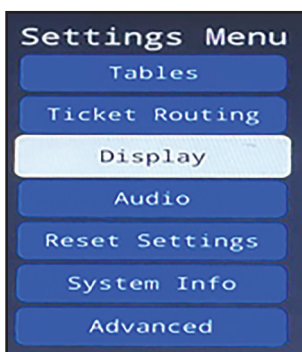


- In the 'Settings Menu', use the scroll bar on the bump bar to move the white box until 'Display' is highlighted.
- Press the 'SHOW' button on the bump bar.

## Step 4





- On the 'Appearance' screen, use the scroll bar on the bump bar to increase or decrease the 'Font Size'.
- The larger the number selected, the bigger the text will be on the app screen.
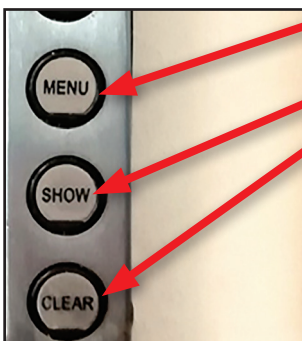
## Step 5



- Once the desired number has been selected, press 'MENU' on the bump bar.
- The white box will then move to the 'Save & restart' box.
- Press the 'SHOW' button on the bump bar to restart the screen.
- Press the 'CLEAR' button at any point to abort the process.

# Changing app screen font size and volume

<b>Step 6</b>	 New model      Old model	<b>To change the volume:</b> <ul style="list-style-type: none"><li>• The ability to change the volume on the app screens is only available if the new model of bump bar installed.</li><li>• Whilst holding the 'MENU' button, press the 'SHOW' button.</li><li>• Release the 'SHOW' button to change the volume, repeat this process to cycle through the available volume options. There are 5 different volume settings from maximum to silent.</li><li>• Release the 'MENU' button once the desired volume has been selected.</li></ul>
<b>Step 7</b>		<ul style="list-style-type: none"><li>• Report any app screen maintenance issues via the property maintenance system.</li><li>• If any errors occur when changing the font size or volume, contact the Zonal help centre for assistance.</li></ul>