






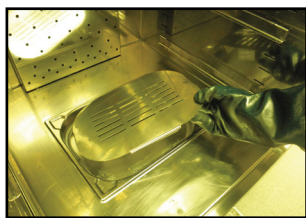
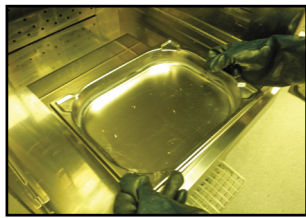






Cloth	Yellow
PPE	• Heat resistant gloves • Apron • Rubber gloves   
Chemicals	• Washing-up liquid • Sanitiser
Reference	• Safety policies • COSHH manual • Risk assessment manual • DMLB
VideoSOP	To be used together with this written SOP. Tap here to play 

Step 1		<ul style="list-style-type: none"> • Switch off and unplug the machine. • Allow to cool for 15 minutes.
Step 2		<ul style="list-style-type: none"> • Open the door and remove individual wire shelves. • Wash the shelves in hot soapy water and allow to air dry.
Step 3		<ul style="list-style-type: none"> • Remove the shelf brackets by lifting them upwards and out. • Wash in hot soapy water and allow to air dry.
Step 4	 	<ul style="list-style-type: none"> • Remove the humidity tray cover at the bottom of the cabinet. • Remove the humidity tray. • Wash both parts in hot soapy water and allow to air dry.

Cleaning the Victor hot holding cabinet – HOT CLEAN

<p>Step 5</p>		<ul style="list-style-type: none"> • Using a yellow cloth and sanitiser, clean the inside of the cabinet, paying particular attention to the sides and door seals.
<p>Step 6</p>		<ul style="list-style-type: none"> • Replace the shelf brackets. • Replace the wire shelves.
<p>Step 7</p>		<ul style="list-style-type: none"> • Using a yellow cloth and sanitiser, clean the outside and door of the cabinet, paying particular attention to the door handle.
<p>Step 8</p>		<ul style="list-style-type: none"> • Ensure that the water bath is left empty until it is next used. • Ensure that hand contact points are sanitised at regular intervals during service and at the end of the day. • Report all maintenance issues via the property maintenance system. • All spillages must be cleaned up immediately.